

OPTION · CLUB PLAYERS

TECHNICAL RIDER

I PLAY ON THE CLUB PLAYERS AND MIXER. I BRING HEADPHONES AND USB STICKS.

VERSION 1.1 · 11/2026
WWW.PROCHY-EM.CZ

I PLAY ON THE CLUB SETUP.

Pioneer DJ / AlphaTheta standard. All I bring is headphones and USB sticks – here is what should be ready on the desk.

WHAT I NEED FROM THE VENUE

PLAYERS	**2× CDJ FROM THESE MODELS** CDJ-3000X · CDJ-3000 · CDJ-2000NXS2 · CDJ-2000NXS
MIXER	**1× DJM FROM THESE MODELS** DJM-A9 · DJM-900NXS2 · DJM-900NXS · DJM-2000
WIRING	**PLAYERS INTO CHANNELS 2 AND 3** Mixer in the middle, left player into channel 2, right player into channel 3.
MONITORING	**BOOTH MONITOR(S) AT THE DESK** With their own volume control. Ideally on both sides, at least on the right.
ACCESS	**60 MINUTES BEFORE THE PRODUCTION STARTS**

I BRING

HEADPHONES

USB STICKS

Nothing else to set up – a ready desk is all I need.

60 MIN
ON SITE AHEAD OF TIME


2× CDJ
AND A DJM MIXER IN THE MIDDLE

CH 2 + 3
CHANNELS FOR THE PLAYERS

WHERE I STAND AND HOW THE DESK SHOULD BE.

DJ with back to the wall, monitors on both sides. Mixer in the middle, players left and right.


FIG. 1 — BOOTH PLAN

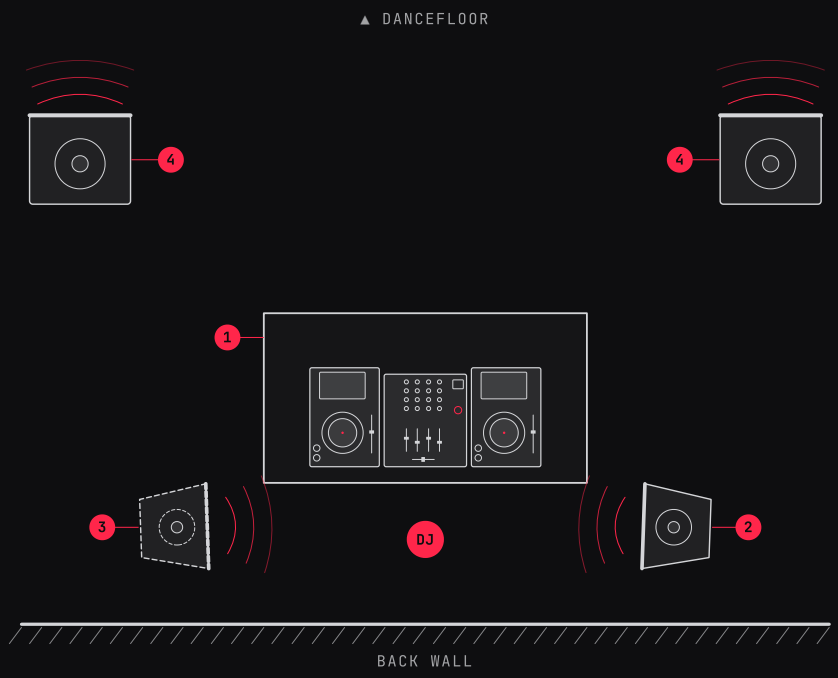

1. **DJ DESK**
   CLUB PLAYERS AND MIXER
2. **MONTIOR ON THE RIGHT**
   REQUIRED · AT EAR HEIGHT, AIMED AT THE DJ
3. **MONITOR ON THE LEFT**
   IDEAL · IF THERE IS ROOM
4. **PA**
   MAIN SYSTEM FACING THE DANCEFLOOR

DJ WITH BACK TO THE WALL. MONITORS IDEALLY ON BOTH SIDES, AT LEAST ON THE RIGHT.

FIG. 2 — DESK LAYOUT

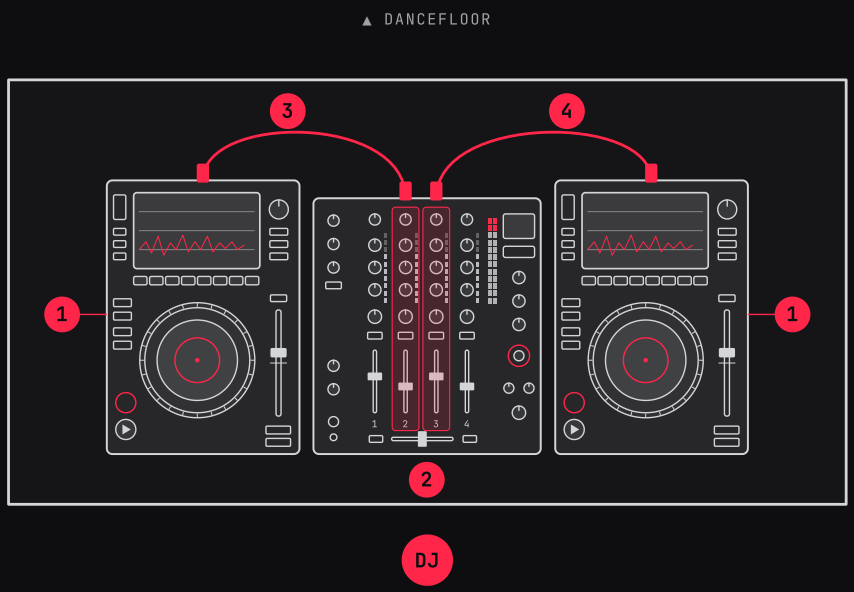

1. **PLAYERS**
   2× CDJ-3000X OR ANOTHER LISTED MODEL
2. **MIXER**
   DJM-A9 OR ANOTHER LISTED MODEL, IN THE MIDDLE
3. **LEFT PLAYER**
   INTO CHANNEL 2
4. **RIGHT PLAYER**
   INTO CHANNEL 3

MIXER IN THE MIDDLE, PLAYERS ON BOTH SIDES AND CONNECTED TO THE INNER CHANNELS. DRAWN TO SCALE.

SOMETHING OFF? GET IN TOUCH BEFOREHAND.

VENUE CHECKLIST · BEFORE THE EVENT

☐	2× CDJ PLAYER FROM THE LIST	GEAR
☐	DJM MIXER FROM THE LIST, IN THE MIDDLE	GEAR
☐	PLAYERS CONNECTED TO CHANNELS 2 AND 3	WIRING
☐	MONITOR ON THE RIGHT, IDEALLY LEFT TOO	MONITORING
☐	MONITOR VOLUME CONTROL AT THE DESK	MONITORING
☐	DESK ACCESS 60 MINUTES BEFORE THE START	TIME

E-MAIL DJ@PROCHY-EM.CZ

PHONE +420 723 351 041